


1. Launch MicroStation and InRoads
2. Go to **Help> About Bentley InRoads V8i...** on the InRoads interface

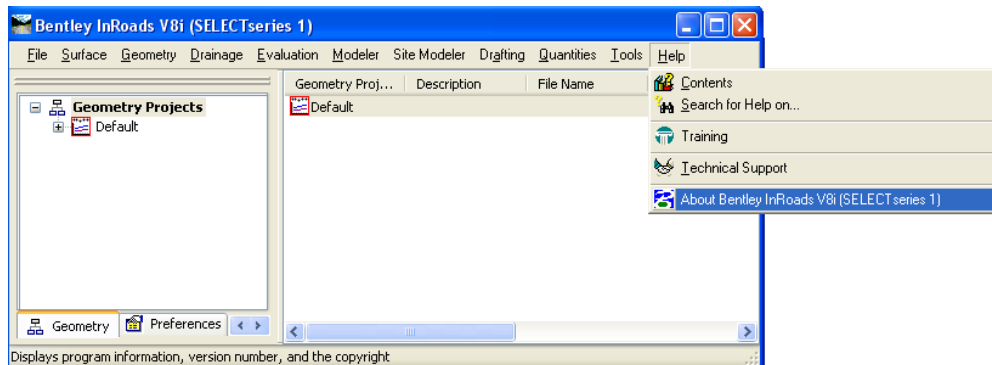

3. Write down the version number you see on the About Bentley InRoads dialog box

